

Important Information on Installing Allplan 2016

Installation options during Setup

First-time installation with copying data (default): this option copies and converts the data of the previous version to the new version. You can choose to transfer projects, too. This option does not change the previous version.

Upgrade: this option also transfers the data to the new version. However, you can no longer use the previous version after upgrading.

First-time installation: this option installs Allplan 2016 in parallel to the version you are running. However, your data will neither be transferred nor converted. You can find more information in the help. Just press F1 during Setup.

Upgrading an Allplan stand-alone workstation

Allplan 2016 comes with a new protection system. Licensing is now based on CodeMeter by Wibu Systems AG. You can no longer use Softlock or hardlock with Allplan 2016.

For running Allplan 2016, you require a Product Key. Using this key, you can activate your license online.

You can find your Product Key in Allplan Connect. Go to <http://connect.allplan.com/license>

Start Setup and follow the instructions displayed. When you are prompted to choose the license configuration, select **License activation**. Enter your **Product Key** (26-digit code) and click the button for activating the license. By activating your license, you connect it with your computer.

Follow the installation instructions.

Upgrading Allplan 2016 with a license server

Allplan 2016 comes with a new protection system. Licensing is now based on CodeMeter by Wibu Systems AG. You can no longer use NemSLock Server with Allplan 2016.

For running Allplan 2016, you require a Product Key. Using this key, you can activate your license online.

You can find your Product Key in Allplan Connect. Go to <http://connect.allplan.com/license>

Important: start by installing the license server. After this, upgrade the clients.

To install the license server, download the software for the license server from Allplan Connect. Install the software on your server by starting Setup and clicking **Install**. After having installed the software, start the license server by starting the **License Settings** program. Go to the **License activation** area, enter your **Product Key** (26-digit code) and click **Activate license**.

By activating the license, you connect it with the server.

If you have more licenses for the license server, enter the respective Product Keys and activate the licenses.

After this, start **CodeMeter WebAdmin** (start CodeMeter and click **WebAdmin** at bottom right or open your browser and enter **localhost://22350**). Go to **Settings – Server** and select the **Start network server** option.

You can then upgrade Allplan at the clients. Start Setup and follow the instructions displayed. The license server license will be detected automatically on the network. When you are prompted to choose the license configuration, select **Use active license**. Follow the installation instructions.

License for Allplan 2015 Allfa

You will get your license by mail from customercare@allplan.com. So that we can create the license for you, please send us your IP address or the **Host ID of the Allfa database server** (Oracle).

Downloading licenses from Allplan Connect

You can find your license for **Allplan 2014 BCM** and the activation code for **Allplan 2016 IBD** in Allplan Connect.

As an extra service we provide the old licenses for hardlock stand-alone workstations, the temporary licenses for NemSLock and the new Product Keys for the new software protection system in Allplan 2016. Click **Profile > License administration**.

Only administrators can use this function.